



---- Instructions ----  
 Set the jumpers to you needs.  
 Connect motor to P101.  
 Connect power supply (Risk of short circuit! See jumper settings)  
 Turn on power supply.  
 Control speed with potentiometer RV101.

---- Jumper settings ----  
 JP101 : Ser jumper to allow only one supply voltage (Disconnect clamp 2 at K101 first! Risk of short circuit between supply rails!)  
 JP102 : Set jumper to disable the output.

File: pwmcontroller.sch

Sheet: /

Title: PWM Motorcontroller

Size: A4

Date: 19 jul 2012

KiCad E.D.A. eeschema (2012-01-19 BZR 3256) --stable

Rev: 1.0

Id: 1/1